

BESTEST7

Testing AC voltage from 100V up to maximum of 500V against earth

The metal part on top of the indicator must be touched to operate it and the earthing position of the user largely determines whether it lights up or not. Failure to light up therefore does not indicate with certainly that no voltage presents.