



Conduit Ventilator instruction

1 NAME OF PART AND MEASURES

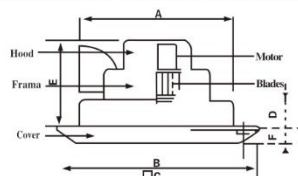

Wiring Diagram

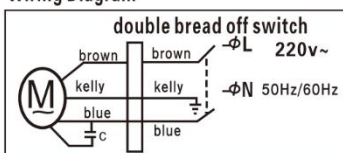

Model	A	B	C	D	E	F	Duct size
BPT12-13A	204	215	246	40	167	20	100
BPT12-13B	228	242	300	40	170	20	100
SRL18	280	300	310	50	200	22	100
SRL30	310	330	370	37	184	30	150


2 TECHNIQUE PARAMETER

Model	Rating Voltage	Rating Frequency	Power	Air delivery	Noise
BPT12-13A	220V~	50Hz/60Hz	30W	130M ³ /h	≤42dB(A)
BPT12-13B	220V~	50Hz/60Hz	30W	165M ³ /h	≤45dB(A)
SRL18	220V~	50Hz/60Hz	40W	260M ³ /h	≤45dB(A)
SRL30	220V~	50Hz/60Hz	50W	500M ³ /h	≤52dB(A)

3 CAUTIONS OF INSTALLATION

1. Do not install in places with high temperature over 40°C and corrosive gases.
2. Use the duct for discharge air and steam.
3. The grounding duct should be mounted outside for using in bathroom.
4. A suction hole should be provided for use in bathroom.
5. Provide an inspection access.


Installing Illustration:

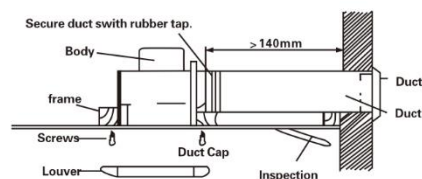


4 INSTALLATION

Body enclosure installation (with ceiling joist)


- (1) Construct the wood frame and attach it to the ceiling joist

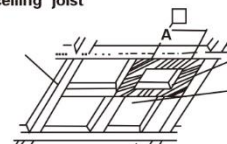

- (2) insert the body enclosure into the wood frame and secure with tapping screws (4Pcs)

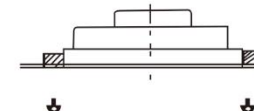

- (3) Switch power on and check operation, compress the springs of the louver and insert them into the long Holes to secure the louver.

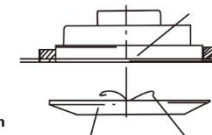

ACTION:

1. The distance between fan and building floor should be more than 2.3m
2. When power supply comes from socket, the plug must accord with IEC 335-1. When the power cord is connected with charging line all-polarity switch the contact gap is should be at least 3mm.

5 MAINTENANCE


WARNING:

Disconnect power source before working on the unit. routine maintenance must be done every year.

CAUTION:

1. Never use petrol, benzene, thinner or any other such chemicals for cleaning the ventilating fan.
2. Do not allow water to enter motor.
3. Do not immerse plastic parts in water 60°C


- 1 Remove louver, cover and blades.

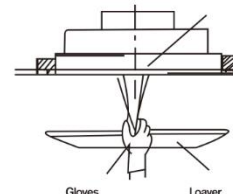

- 2 Wash and clean louver, cover and blades.



- 3 Clean dirt on fan body using a cleaner.

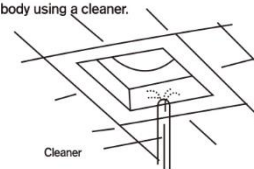

- 4 Using a soft cloth dampened with kitchen detergent to remove any dirt from fan body. wipe dry with clean cloth. Replace louver, cover and blades.

