





FEATURES:

- 4 Digits LED Numeric Display
- 101-segment LED Bargraph display
- Wide Range of User Definable Scaling Ratio
- Modulized input signal boards available for different applications
- Optional Output Boards with Isolated Analog Output & Relay Output
- 85V~265VAC or 18~36VDC Switching Power Supply
- Support volume adjustment function for non-linear tank (optional)
- IP54 Class front panel

SPECIFICATIONS

Dimension (mm)	48 (W) x144 (H) x121.5 (D) DIN 3/16
Model	PB-1471
Power Supply	85 ~ 265V AC or 18~36V DC Switching Power Supply
Power Supply for sensor	DC24V, 50mA
Display	4 Digits, 0.36" 7-Segment red LED Display 101 LED Bargraph Display 6 LED set-point indicator Display Range: -1999 ~ +9999 Over Range Display: "1" or "-1"
Input Signal	Range: Refer to Ordering information Accuracy: 0.1%FS or ± 1 digit ADC Resolution: 4-1/2 digit Sampling Rate: 4 samples/second
Relay Contact	4 relay (up to 6 relay) 3A/250V AC or 5A/30V DC (N.C. / N.O. Jumper selectable)
Analog Output	4~20mA, 0~20mA, 2~10V and 0~10V (optional)
Power consumption	Less then 9VA
Communication port	RS485 (optional) Modbus Protocol
Operating condition	0~50°C(20 to 90% RH non-condensed)
Storage condition	0~70°C(20 to 90% RH non-condensed)

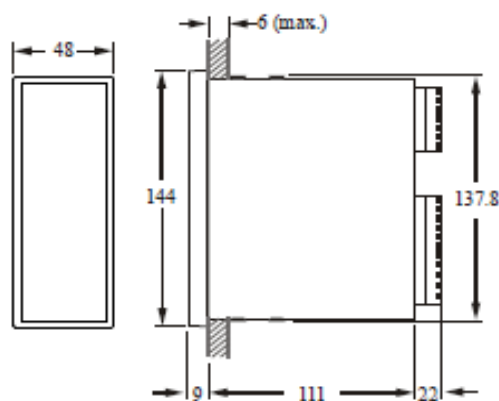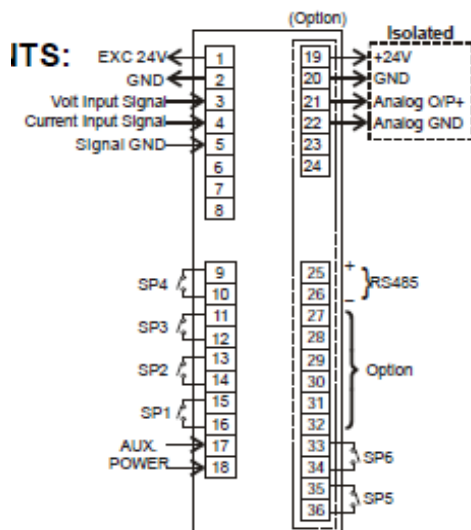

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE


Sales 010 202 3400
Technical 010 202 3500

www.acdc.co.za


This section will elaborate how to adapt to different input signals in the PB series panel meter, by using the correct jumper and using iSEL command. Panel meter series can accommodate 6 types of conventional input signals, 20mA, 200mA, 5V, 10V, 20V, 200V, please refer below for setup.

Single Channel Signal Input Module: (for PB-1471, PB-1470, PB-1570)


01: 4~20mA DC with Excitation +24V

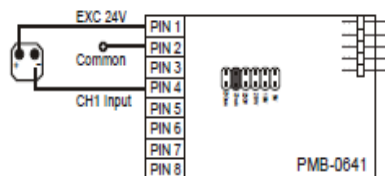


02: 0~20mA DC with Excitation +24V

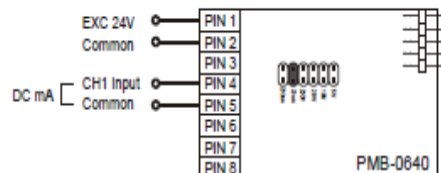


03: 0~200mA DC with Excitation +24V

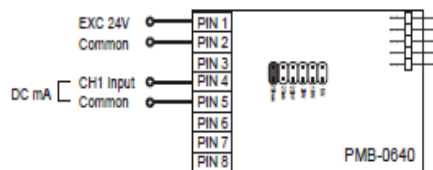


04: $\pm 5V$ DC with Excitation +24V

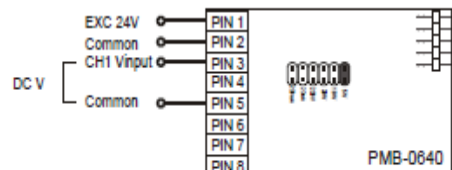


05: $\pm 10V$ DC with Excitation +24V

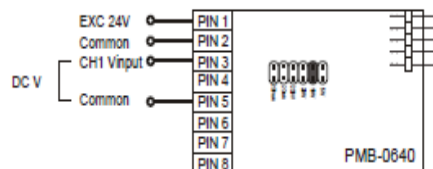

06: $\pm 20V$ DC with Excitation +24V

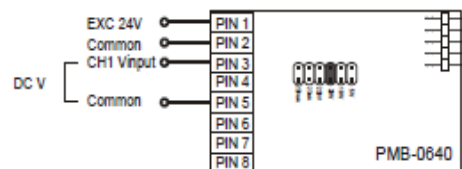

07: $\pm 200V$ DC with Excitation +24V

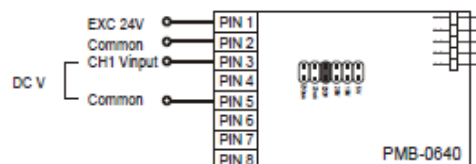

BRANCH CONTACT DETAILS

Johannesburg	010 202 3300
Germiston	011 418 9600
Cape Town	021 510 0710
Pinetown	031 700 4215
Riverhorse	031 492 4800

NATIONAL CALL CENTRE

Sales	010 202 3400
Technical	010 202 3500

www.acdc.co.za

PM5022R3 / PB-1471


AC Signal Inputs

This section will elaborate how to adapt to different input signals in the PB series panel meter, by using the correct jumper and using iSEL command. Panel meter series can accommodate 6 types of conventional input signals, 20mA, 200mA, 5V, 10V, 20V, 200V, please refer below for setup.


Single Channel Signal Input Module: (for PB-1471, PB-1470, PB-1570)

Ma / A Range


A1: 2mA AC Scaled RMS

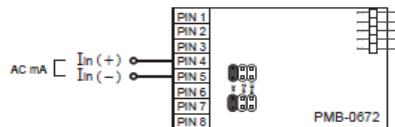


A2: 20mA AC Scaled RMS

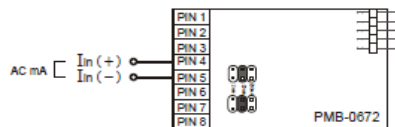


A3: 200mA AC Scaled RMS

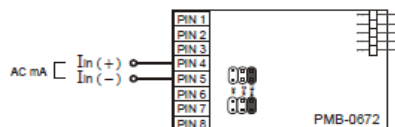

A4: 1Amp AC Scaled RMS

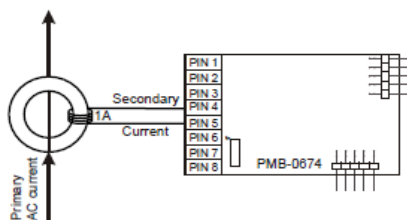


A5: 5 Amp AC Scaled RMS

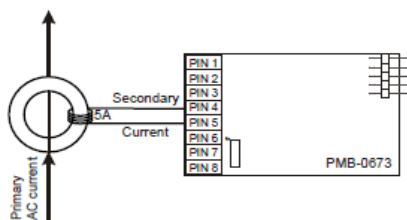


Mv / V Range


B1: 100mV AC Scaled RMS

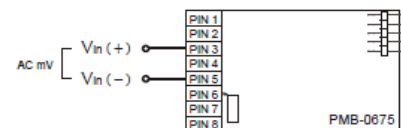


B2: 200mV AC Scaled RMS

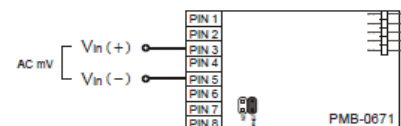


B3: 2V AC Scaled RMS

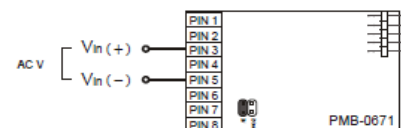


B4: 20V AC Scaled RMS

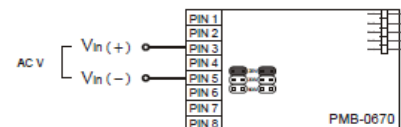

B5: 200V AC Scaled RMS

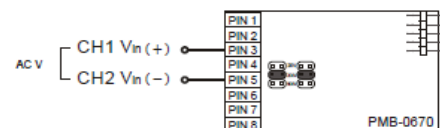

B6: 600V AC Scaled RMS

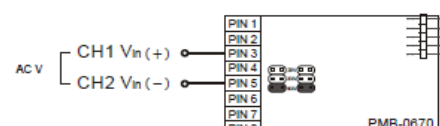

BRANCH CONTACT DETAILS

Johannesburg	010 202 3300
Germiston	011 418 9600
Cape Town	021 510 0710
Pinetown	031 700 4215
Riverhorse	031 492 4800

NATIONAL CALL CENTRE

Sales	010 202 3400
Technical	010 202 3500

www.acdc.co.za

PM5022R3 / PB-1471


DC Signal Inputs

This section will elaborate how to adapt to different input signals in the PB series panel meter, by using the correct jumper and using iSEL command. Panel meter series can accommodate 6 types of conventional input signals, 20mA, 200mA, 5V, 10V, 20V, 200V, please refer below for setup.


Single Channel Signal Input Module: (for PB-1471, PB-1470, PB-1570)

Ma / A Range


C1: 2mA DC with Excitation +24V

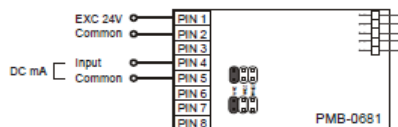


C2: 20mA DC with Excitation +24V

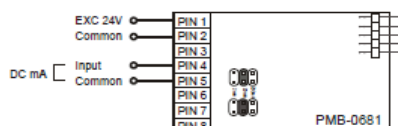


C3: 200mA DC with Excitation +24V

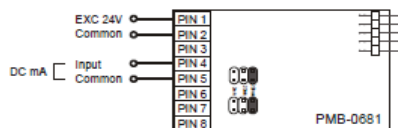

C4: 1A DC

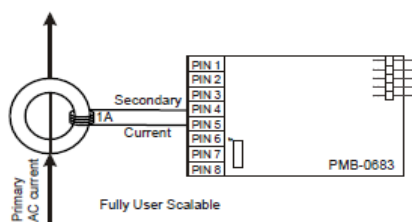


C5: 5A DC

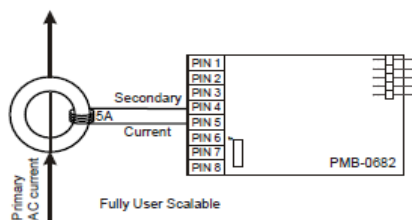


Mv / V Range


D1: 20 mV DC with Excitation +24V

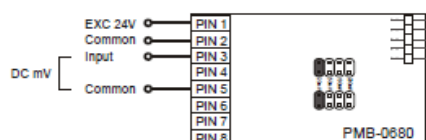


D2: 50 mV DC with Excitation +24V

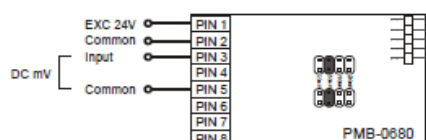

D3: 100 mV DC with Excitation +24V

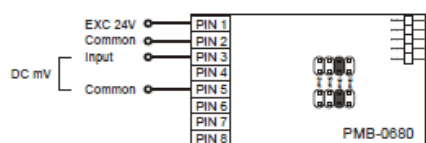

D4: 200 mV DC with Excitation +24V

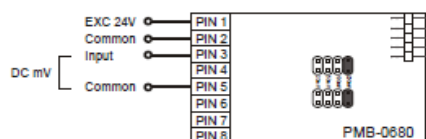

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800


NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500

www.acdc.co.za

PM5022R3 - PB-1471

Program Settings Flowchart

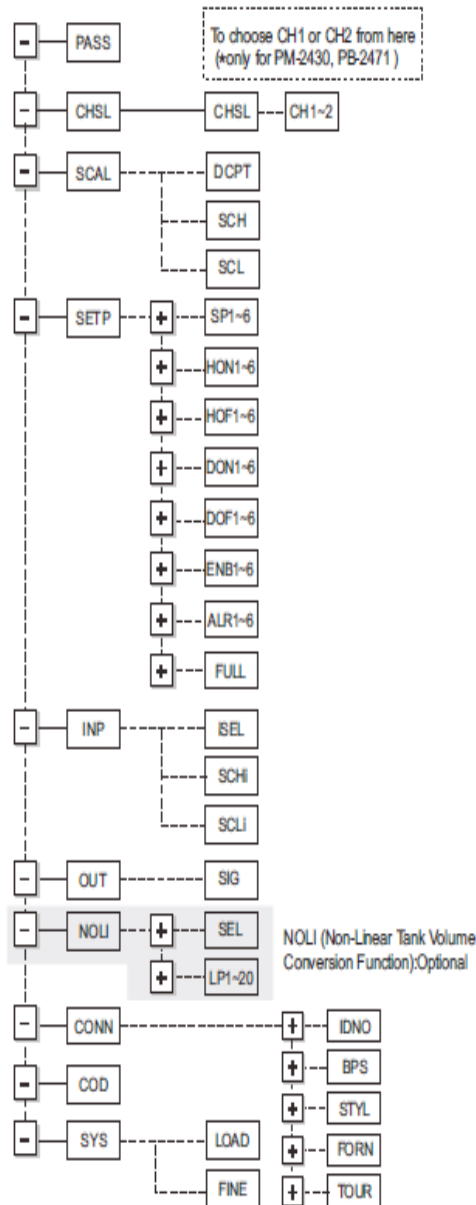

Buttons Explanation


The settings on the panel meter is controlled by the 3 buttons on the panel (UP, SHIFT and ENTER). First choose the function, then input required value of 3 buttons while in "Selection" and "Setting" are:

	Selection	Settings
UP	Escape	Addition
SHIFT	Enter	Position Shift
ENTER	Switch	Confirmation

*Please enter password to modify the parameter. (Default password: 4607)

ENTER Button

- 1) Main menu switch or sub-menu switch.
Example: STEP 1 ~ STEP 2 and STEP 3 ~ STEP 5.
- 2) Confirmation to save settings
Example: Confirmation of change of SCHI value

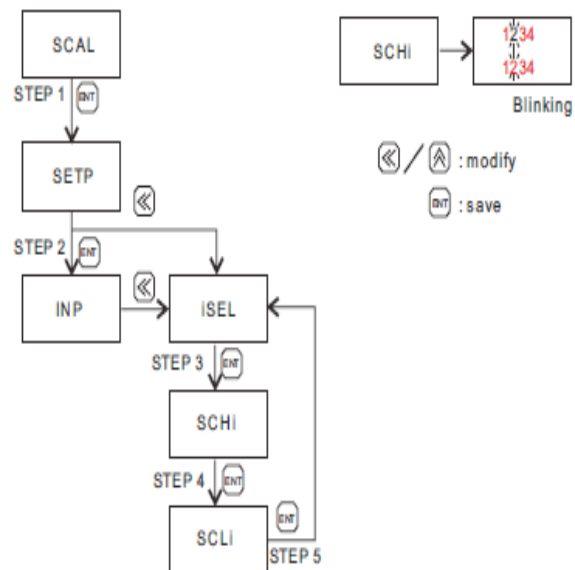

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE


Sales 010 202 3400
Technical 010 202 3500
www.acdc.co.za

PM5022R3 - PB-1471


Program Settings Flowchart

SHIFT Button

- Entry into main menu or entry into sub-menu or position change.
Example: STEP 1, STEP 2 and STEP 3 ~ STEP 7
- Position shift
After entering into value input, use this button to shift between digit position.

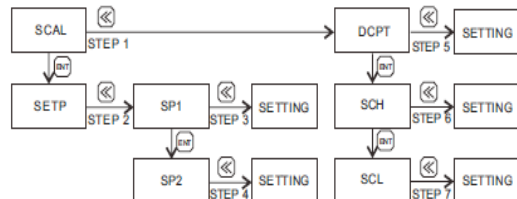


 - Moving Numeric : Moving the parameter numeric to modify.
For example : Into SCHI function setting, one of the numeric will be blinking to modify, and use SHIFT bottom to select blinking digit for modify.




UP Button

- To escape from main menu and to escape from sub-menu to main menu.
Example: STEP 1 and STEP 2

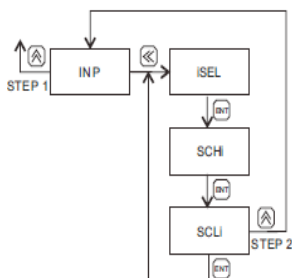

 - To change input value by addition.
Example: To change the value of SCHI from "1230" to "1234", press button four times.



SIM Input Module Specifications and Jumper Elaboration.

Module	Input Signal	Range	Jumper Setting
01	4~20mA with Exc+24V	DC 4~20mA	
02	± 0~20mA with Exc+24V	DC 0~20mA	
03	± 0~200mA with Exc+24V	DC 0~200mA	
04	± 5V with Exc+24V	DC ± 5V	
05	± 10 with Exc+24V	DC ± 10V	
06	± 20 with Exc+24V	DC ± 20V	
07	± 200V with Exc+24V	DC ± 200V	
A1	2mA AC Scaled RMS	AC 0~2mA	Left & right Jumper must change symmetrically.
A2	20mA AC Scaled RMS	AC 0~20mA	
A3	200mA AC Scaled RMS	AC 0~200mA	
A4	1AAC Scaled RMS	AC 0~1A	
A5	5AAC Scaled RMS	AC 0~5A	
B1	100mV AC Scaled RMS	DC 0~100mV	
B2	200mV AC Scaled RMS	AC 0~200mV	
B3	2V AC Scaled RMS	AC 0~2V	
B4	20V AC Scaled RMS	AC 0~20V	
B5	200V AC Scaled RMS	AC 0~200V	
B6	600V AC Scaled RMS	AC 0~600V	
C1	± 2mA Exc+24V	DC ± 2mA	
C2	± 20mA Exc+24V	DC ± 20mA	
C3	± 200mA Exc+24V	DC ± 200mA	
C4	± 1Amp	DC ± 1A	
C5	± 5Amp	DC ± 5A	
D1	± 20mV Exc+24V	DC ± 20mV	
D2	± 50mV Exc+24V	DC ± 50mV	
D3	± 100mV Exc+24V	DC ± 100mV	
D4	± 200mV Exc+24V	DC ± 200mV	

PM5022R3 - PB-1471

Program Settings Flowchart

Command	Description	4 Digit Setting Range	4 Digit Factory Default	5 Digit Setting Range	5 Digit Factory Default
PASS	Password	0~9999	4607	0~9999	4607
CHSL	Channel Selection	CH1/CH2	CH1	CH1/CH2	CH1
SCAL	Set DCPT, SCH, SCL				
DCPT	Decimal point Selection	0~3	Dot1	0~4	Dot2
SCH	Display value for SPAN	-1999~9999	100.0	-19999~32767	100.00
SCL	Display value for SPAN	-1999~9999	000.0	-19999~32767	000.00
SETP	Set SP1~6, HON1~6, DON1~6, DOF1~6, ENB1~6, ALR1~6, FULL				
SP1	SP1 Set point value	-1999~9999	020.0	-19999~32767	020.00
SP2	SP2 Set point value	-1999~9999	040.0	-19999~32767	040.00
SP3	SP3 Set point value	-1999~9999	060.0	-19999~32767	060.00
SP4	SP4 Set point value	-1999~9999	080.0	-19999~32767	080.00
SP5	SP5 Set point value	-1999~9999	NULL	-19999~32767	NULL
SP6	SP6 Set point value	-1999~9999	NULL	-19999~32767	NULL
HON1	SP1 Hysterises High Band	0~9999	000.0	0~32767	000.00
HON2	SP2 Hysterises High Band	0~9999	000.0	0~32767	000.00
HON3	SP3 Hysterises High Band	0~9999	000.0	0~32767	000.00
HON4	SP4 Hysterises High Band	0~9999	000.0	0~32767	000.00
HON5	SP5 Hysterises High Band	0~9999	000.0	0~32767	000.00
HON6	SP6 Hysterises High Band	0~9999	000.0	0~32767	000.00
HOF1	SP1 Hysterises Low Band	0~9999	000.0	0~32767	000.00
HOF2	SP2 Hysterises Low Band	0~9999	000.0	0~32767	000.00
HOF3	SP3 Hysterises Low Band	0~9999	000.0	0~32767	000.00
HOF4	SP4 Hysterises Low Band	0~9999	000.0	0~32767	000.00
HOF5	SP5 Hysterises Low Band	0~9999	000.0	0~32767	000.00
HOF6	SP6 Hysterises Low Band	0~9999	000.0	0~32767	000.00
DON1	SP1 Delay On Setting	00~99	00	0~99	00
DON2	SP2 Delay On Setting	00~99	00	0~99	00
DON3	SP3 Delay On Setting	00~99	00	0~99	00
DON4	SP4 Delay On Setting	00~99	00	0~99	00
DON5	SP5 Delay On Setting	00~99	00	0~99	00
DON6	SP6 Delay On Setting	00~99	00	0~99	00

Command	Description	4 Digit Setting Range	4 Digit Factory Default	5 Digit Setting Range	5 Digit Factory Default
DOF1	SP1 Delay Off Setting	00~99	00	0~999	000
DOF2	SP2 Delay Off Setting	00~99	00	0~999	000
DOF3	SP3 Delay Off Setting	00~99	00	0~999	000
DOF4	SP4 Delay Off Setting	00~99	00	0~999	000
DOF5	SP5 Delay Off Setting	00~99	00	0~999	000
DOF6	SP6 Delay Off Setting	00~99	00	0~999	000
ENB1	SP1 Relay On / Off Selecting	ON / OFF	ON	ON / OFF	ON
ENB2	SP2 Relay On / Off Selecting	ON / OFF	ON	ON / OFF	ON
ENB3	SP3 Relay On / Off Selecting	ON / OFF	ON	ON / OFF	ON
ENB4	SP4 Relay On / Off Selecting	ON / OFF	ON	ON / OFF	ON
ENB5	SP5 Relay On / Off Selecting	ON / OFF	OFF	ON / OFF	OFF
ENB6	SP6 Relay On / Off Selecting	ON / OFF	OFF	ON / OFF	OFF
ALR1	SP1 Hi / Lo Alarm Selection	HI / LO	LO	HI / LO	LO
ALR2	SP2 Hi / Lo Alarm Selection	HI / LO	LO	HI / LO	LO
ALR3	SP3 Hi / Lo Alarm Selection	HI / LO	HI	HI / LO	HI
ALR4	SP4 Hi / Lo Alarm Selection	HI / LO	HI	HI / LO	HI
ALR5	SP5 Hi / Lo Alarm Selection	HI / LO	HI	HI / LO	HI
ALR6	SP6 Hi / Lo Alarm Selection	HI / LO	HI	HI / LO	HI
FULL	Enter this item for all setting items	YES / NO	NO	YES / NO	NO
inp	Input Signal Setting				
ISEL	Input Type Selection		4~20		4~20
SCHI	SPAN Percentage for SPE mode	-1999~9999	100.0	-19999~32767	100.00
SCLI	ZERO Percentage for SPE mode	-1999~9999	000.0	-19999~32767	000.00
out	Output Signal Setting				
SIG	Analog Output Type Selection		4~20		4~20
NOLI	Non-Linear Tank Function				
SEL	Enable / Disable	ON / OFF	OFF	ON / OFF	OFF
LP1	Control Point #1	0~1999	5	0~19999	5
LP2	Control Point #2	0~1999	10	0~19999	10
LP3	Control Point #3	0~1999	15	0~19999	15

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500
www.acdc.co.za

Program Settings Flowchart

Command	Description	4 Digit Setting Range	4 Digit Factory Default	5 Digit Setting Range	5 Digit Factory Default
LP4	Control Point #4	0~1999	20	0~19999	20
LP5	Control Point #5	0~1999	25	0~19999	25
LP6	Control Point #6	0~1999	30	0~19999	30
LP7	Control Point #7	0~1999	35	0~19999	35
LP8	Control Point #8	0~1999	40	0~19999	40
LP9	Control Point #9	0~1999	45	0~19999	45
LP10	Control Point #10	0~1999	50	0~19999	50
LP11	Control Point #11	0~1999	55	0~19999	55
LP12	Control Point #12	0~1999	60	0~19999	60
LP13	Control Point #13	0~1999	65	0~19999	65
LP14	Control Point #14	0~1999	70	0~19999	70
LP15	Control Point #15	0~1999	75	0~19999	75
LP16	Control Point #16	0~1999	80	0~19999	80
LP17	Control Point #17	0~1999	85	0~19999	85
LP18	Control Point #18	0~1999	90	0~19999	90
LP19	Control Point #19	0~1999	95	0~19999	95
LP20	Control Point #20	0~1999	100	0~19999	100
cod	Change Password	0~9999	4607	4607	0~9999
System Settings					
LOAD	Reset to factory default	YES/NO	NO	YES/NO	NO
FINE	Read Software Version Code				

Command	Description	Setting Range	Factory Default
RS485 Settings			
CONN	Settings ModBus Address	0~255	255
BPS	Setting ModBus BaudRate	more	600
600	600BPS	600	
1200	1200BPS	1200	
2400	2400BPS	2400	
4800	4800BPS	4800	
9600	9600BPS	9600	
144G	14400BPS	14400	
192G	19200BPS	19200	
288G	28800BPS	28800	
576G	57600BPS	57600	
STYL	Settings Data Type	more	8N1
8N1	8 Byte, No Parity, 1 Stop Bits	8N1	
7N2	7 Byte, No Parity, 2 Stop Bits	7N2	
7O1	7 Byte, Odd Parity, 1 Stop Bits	7O1	
7E1	7 Byte, Even Parity, 1 Stop Bits	7E1	
8N2	8 Byte, No Parity, 2 Stop Bits	8N2	
8O1	8 Byte, Odd Parity, 1 Stop Bits	8O1	
8E1	8 Byte, Even Parity, 1 Stop Bits	8E1	
7O2	7 Byte, Odd Parity, 2 Stop Bits	7O2	
7E2	7 Byte, Even Parity, 2 Stop Bits	7E2	
FORN	Settings Data Format	more	HEX
HEX	RTU Mode	HEX	
ASCII	ASCII Mode	ASCII	
TOUT	Time Out	100~9999mS	300mS

BRANCH CONTACT DETAILS
 Johannesburg 010 202 3300
 Germiston 011 418 9600
 Cape Town 021 510 0710
 Pinetown 031 700 4215
 Riverhorse 031 492 4800

NATIONAL CALL CENTRE
 Sales 010 202 3400
 Technical 010 202 3500
www.acdc.co.za

3.5 Input Signal Settings


This section will elaborate how to adapt to different input signals in the panel meter, by using the correct jumper and using ISEL command. Panel meter series can accommodate 6 types of conventional input signals, 20mA, 200mA, 5V, 10V, 20V, 200V, please refer below for setup.

STEP 1: Please confirm the type of input signal

STEP 2: Open up MG casing and locate the SIM input signal module, select the jumper connection that corresponds to the required input signal.

STEP 3: Enter the main menu of the MG after password input, select ISEL and select the correct input signal from the list below.

3.5.1 Diagram

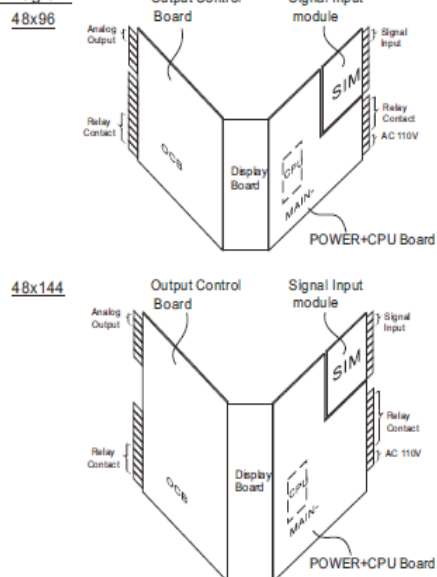

3.5.2 Input Signal & Setting Table

SIM No.	Signal Type	Jumper position	User Setup (ISEL)
01 & 02	0~20mA	20 mA	ISEL → 0 - 20
	4~20mA		ISEL → 4 - 20
	20~0mA		ISEL → 20 - 0
	20~4mA		ISEL → 20 - 0
	Special range 0~20mA		ISEL → SPE → SCHI → SCLI
03	A200mA	200mA	ISEL → 0 - 20
	Special range 0~200mA		ISEL → SPE → SCHI → SCLI Refer to 4.2.2
04	A5V	5V	ISEL → 0 - 5
	1~5V		ISEL → 1 - 5
	Special range 0~5V		ISEL → SPE → SCHI → SCLI Refer to 4.2.2
05	A10V	10V	ISEL → 0 - 10
	2~10V		ISEL → 2 - 10
	Special range 0~10V		ISEL → SPE → SCHI → SCLI Refer to 4.2.2
06	A20V	20V	ISEL → 0 - 20
	Special range 0~20V		ISEL → SPE → SCHI → SCLI Refer to 4.2.2
07	A200V	200V	ISEL → 0 - 20
	Special range 0~200V		ISEL → SPE → SCHI → SCLI Refer to 4.2.2
A1	AC Current RMS 0~2mA	2mA	ISEL → 0 - 10
			SCAL → DCPT → 3
			→ SCH → 2.000
A2	AC Current RMS 0~20mA	20mA	ISEL → 0 - 10
			SCAL → DCPT → 2
			→ SCH → 20.00

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500

www.acdc.co.za

SIM No.	Signal Type	Jumper position	User Setup (iSEL)
A3	AC Current RMS 0~200mA	200mA	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
A4	AC Current RMS 0~1A	1A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 100.0
A5	AC Current RMS 0~5A	5A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 5.000
B1	AC Voltage RMS 0~100mV	100mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 100.0
B2	AC Voltage RMS 0~200mV	200mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
B3	AC Voltage RMS 0~2V	2V	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 2.000
B4	AC Voltage RMS 0~20V	20V	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00 Refer to 4.2.2
B5	AC Voltage RMS 0~200V	200V	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0 Refer to 4.2.2
B6	AC Voltage RMS 0~600V	600V	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 600.0

SIM No.	Signal Type	Jumper position	User Setup (iSEL)
C1	DC Current A2mA	2mA	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 2.000
C2	DC Current A20mA	20mA	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00
C3	DC Current A200mA	200mA	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
C4	DC Current A1A	1A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 1.000
C5	DC Current A5A	5A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 5.000
D1	DC Voltage A20mV	20mV	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00
D2	DC Voltage A50mV	50mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 50.0
D3	DC Voltage A100mV	100mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 100.0
D4	DC Voltage A200mV	200mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
 Germiston 011 418 9600
 Cape Town 021 510 0710
 Pinetown 031 700 4215
 Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
 Technical 010 202 3500

www.acdc.co.za

SIM No.	Signal Type	Jumper position	User Setup (iSEL)
A3	AC Current RMS 0~200mA	200mA	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
A4	AC Current RMS 0~1A	1A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 100.0
A5	AC Current RMS 0~5A	5A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 5.000
B1	AC Voltage RMS 0~100mV	100mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 100.0
B2	AC Voltage RMS 0~200mV	200mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
B3	AC Voltage RMS 0~2V	2V	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 2.000
B4	AC Voltage RMS 0~20V	20V	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00 Refer to 4.2.2
B5	AC Voltage RMS 0~200V	200V	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0 Refer to 4.2.2
B6	AC Voltage RMS 0~600V	600V	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 600.0

SIM No.	Signal Type	Jumper position	User Setup (iSEL)
C1	DC Current A2mA	2mA	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 2.000
C2	DC Current A20mA	20mA	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00
C3	DC Current A200mA	200mA	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0
C4	DC Current A1A	1A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 1.000
C5	DC Current A5A	5A	iSEL → 0 - 10 SCAL → DCPT → 3 SCH → 5.000
D1	DC Voltage A20mV	20mV	iSEL → 0 - 10 SCAL → DCPT → 2 SCH → 20.00
D2	DC Voltage A50mV	50mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 50.0
D3	DC Voltage A100mV	100mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 100.0
D4	DC Voltage A200mV	200mV	iSEL → 0 - 10 SCAL → DCPT → 1 SCH → 200.0

BRANCH CONTACT DETAILS


Johannesburg 010 202 3300
 Germiston 011 418 9600
 Cape Town 021 510 0710
 Pinetown 031 700 4215
 Riverhorse 031 492 4800

NATIONAL CALL CENTRE


Sales 010 202 3400
 Technical 010 202 3500
www.acdc.co.za

3.5.3 Current Signal Input Example

A. 2 wire 4~20mA current signal input example

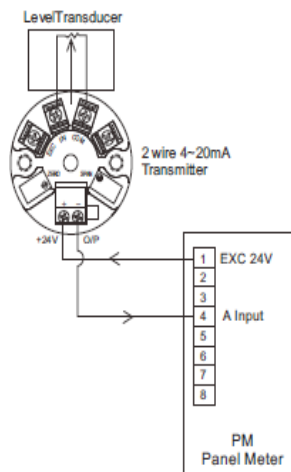

B. 3 wire 4~20mA current signal input example

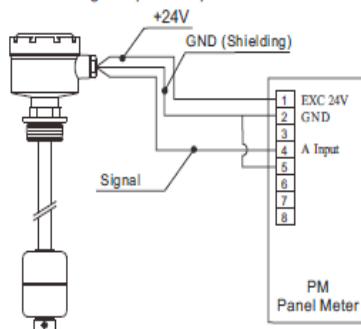


3.5.4 Non-linear feature settings


Special feature:

Non-linear settings could be used in applications concerning non-conventional shaped tanks, thereby solving the problem for level v.s. volume measurement for non-linear tank shapes.

- To divide the maximum measurement into 20 set points, then configure each of these 20 set points according to the shape of the tank, the panel meter will then calculate a proportional readout from the input signal to reflect the true value according to the Meter settings.

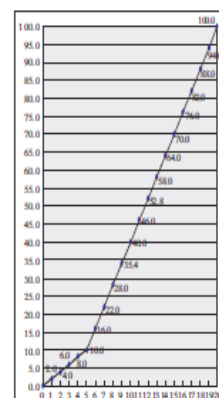

PASS	CHSL	SETP	INP	OUT	NOLI
SEL	ON				
LP1	002.0				
LP2	004.0				
LP3	006.0				
LP4	008.0				
LP5	010.0				
LP6	016.0				
LP7	022.0				
LP8	028.0				
LP9	034.0				
LP10	040.0				
LP11	046.0				
LP12	052.0				
LP13	058.0				
LP14	064.0				
LP15	070.0				
LP16	076.0				
LP17	082.0				
LP18	088.0				
LP19	094.0				
LP20	100.0				

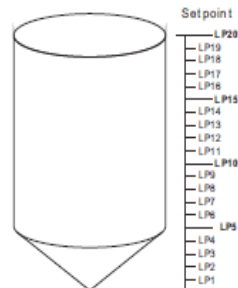


3.6 Output Signal Setting

3.6.1 Optional relay output setting

The optional relay output is switchable to NO (Normal Open) or NC (Normal Close), it is selectable by the jumper on the OCB (Output Control Board). The default setting is "NO".


- Model: PB-1470, PB-1471, PB-1570

SP5 and SP6 relay setting is as below drawing:

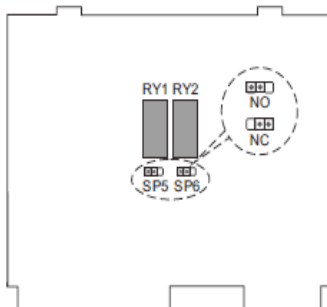

- Model: PB-2471 Series

SP5, SP6, SP7 and SP8 relay setting is as below drawing:

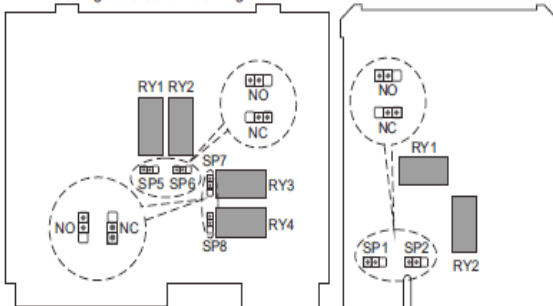

- Model: PM-1430, PM-1530, PM-2430 Series

3.6.2 Analog output signal selection

Analog output signal (optional) provides 4~20mA or 0~10V signal, it can be selected by the jumper on the OCB (Output Control Board) for current output 4~20mA or voltage output (0~10V).


- Model: PB-1470, PB-1471, PB-1570, PB-2471



Channel 1 is selected by JP1
Channel 2 is selected by JP2

 Jumper is for current output
 Jumper is for voltage output

- Model: PM-1430, PM-1530, PM-2430

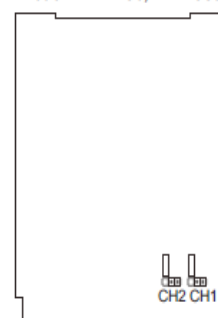

 Jumper is for current output
 Jumper is for voltage output

BRANCH CONTACT DETAILS

Johannesburg	010 202 3300
Germiston	011 418 9600
Cape Town	021 510 0710
Pinetown	031 700 4215
Riverhorse	031 492 4800

NATIONAL CALL CENTRE

Sales	010 202 3400
Technical	010 202 3500

www.acdc.co.za

Product SPECIFICATION SHEET



PM5022R3 - PB-1471

SIM No.	Signal Type	Jumper position	User Setup (ISEL)
A3	AC Current RMS 0-200mA	200mA	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 200.0
A4	AC Current RMS 0-1A	1A	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 100.0
A5	AC Current RMS 0-5A	5A	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 5.000
B1	AC Voltage RMS 0-100mV	100mV	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 100.0
B2	AC Voltage RMS 0-200mV	200mV	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 200.0
B3	AC Voltage RMS 0-2V	2V	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 2.000
B4	AC Voltage RMS 0-20V	20V	ISEL → 0 - 10 SCAL → DCPT → 2 → SCH → 20.00 Refer to 4.2.2
B5	AC Voltage RMS 0-200V	200V	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 200.0 Refer to 4.2.2
B6	AC Voltage RMS 0-600V	600V	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 600.0

SIM No.	Signal Type	Jumper position	User Setup (ISEL)
C1	DC Current A2mA	2mA	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 2.000
C2	DC Current A20mA	20mA	ISEL → 0 - 10 SCAL → DCPT → 2 → SCH → 20.00
C3	DC Current A200mA	200mA	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 200.0
C4	DC Current A1A	1A	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 1.000
C5	DC Current A5A	5A	ISEL → 0 - 10 SCAL → DCPT → 3 → SCH → 5.000
D1	DC Voltage A20mV	20mV	ISEL → 0 - 10 SCAL → DCPT → 2 → SCH → 20.00
D2	DC Voltage A50mV	50mV	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 50.0
D3	DC Voltage A100mV	100mV	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 100.0
D4	DC Voltage A200mV	200mV	ISEL → 0 - 10 SCAL → DCPT → 1 → SCH → 200.0

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500


www.acdc.co.za

Product SPECIFICATION SHEET


PM5022R3 - PB-1471

3.5.3 Current Signal Input Example

A. 2 wire 4~20mA current signal input example

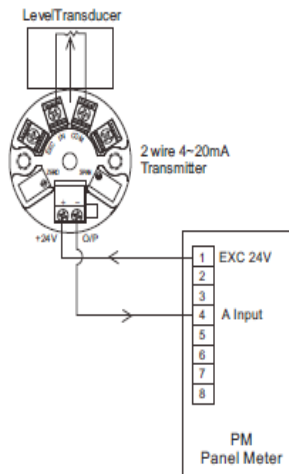

B. 3 wire 4~20mA current signal input example

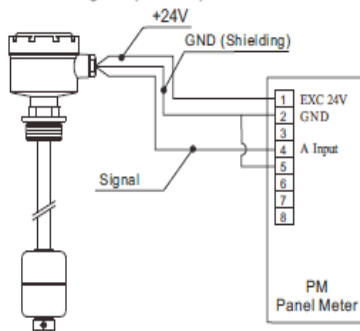


3.5.4 Non-linear feature settings


Special feature:

Non-linear settings could be used in applications concerning non-conventional shaped tanks, thereby solving the problem for level v.s. volume measurement for non-linear tank shapes.

• To divide the maximum measurement into 20 set points, then configure each of these 20 set points according to the shape of the tank, the panel meter will then calculate a proportional readout from the input signal to reflect the true value according to the Meter settings.

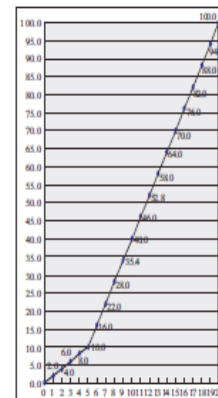

PASS	SEL	ON
CHSL	LP1	002.0
SETP	LP2	004.0
INP	LP3	006.0
OUT	LP4	008.0
NOLI	LP5	010.0
	LP6	016.0
	LP7	022.0
	LP8	028.0
	LP9	034.0
	LP10	040.0
	LP11	046.0
	LP12	052.0
	LP13	058.0
	LP14	064.0
	LP15	070.0
	LP16	076.0
	LP17	082.0
	LP18	088.0
	LP19	094.0
	LP20	100.0

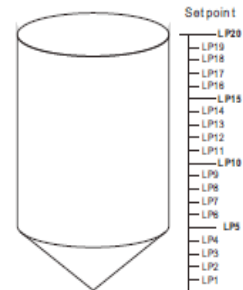

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500

www.acdc.co.za

Product SPECIFICATION SHEET

PM5022R3 - PB-1471


3.6 Output Signal Setting

3.6.1 Optional relay output setting

The optional relay output is switchable to NO (Normal Open) or NC (Normal Close), it is selectable by the jumper on the OCB (Output Control Board). The default setting is "NO".


- Model: PB-1470, PB-1471, PB-1570

SP5 and SP6 relay setting is as below drawing:

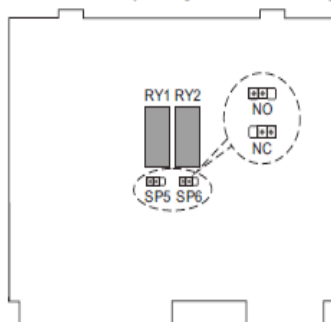

- Model: PB-2471 Series

SP5, SP6, SP7 and SP8 relay setting is as below drawing:

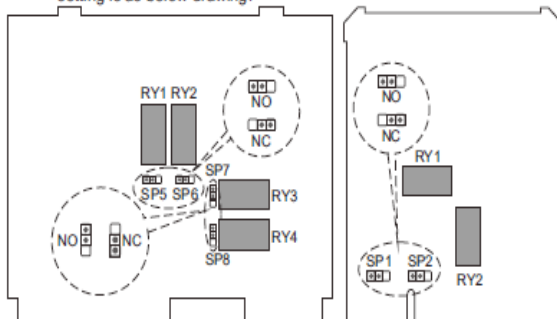


- Model: PM-1430, PM-1530, PM-2430 Series

3.6.2 Analog output signal selection

Analog output signal (optional) provides 4~20mA or 0~10V signal, it can be selected by the jumper on the OCB (Output Control Board) for current output 4~20mA or voltage output (0~10V).

- Model: PB-1470, PB-1471, PB-1570, PB-2471

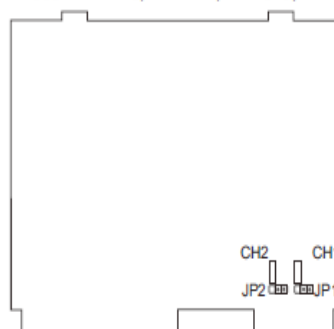


Channel 1 is selected by JP1

Channel 2 is selected by JP2

☐ Jumper is for current output

☐ Jumper is for voltage output

- Model: PM-1430, PM-1530, PM-2430

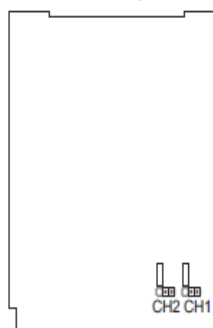

☐ Jumper is for current output

☐ Jumper is for voltage output

BRANCH CONTACT DETAILS

Johannesburg	010 202 3300
Germiston	011 418 9600
Cape Town	021 510 0710
Pinetown	031 700 4215
Riverhorse	031 492 4800

NATIONAL CALL CENTRE

Sales	010 202 3400
Technical	010 202 3500


www.acdc.co.za

Product SPECIFICATION SHEET

PM5022R3 - PB-1471


4. Program Setting Example

4.1 Diagram of Setting Values

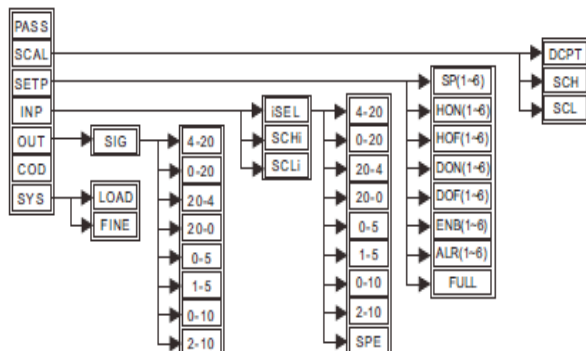

4.2 Program Settings Example

Magnetic Float Level Indicator delivers a current output that change proportionately with level. The 4 ~ 20mA output could be used in conjunction with the PB-1471 panel meter.

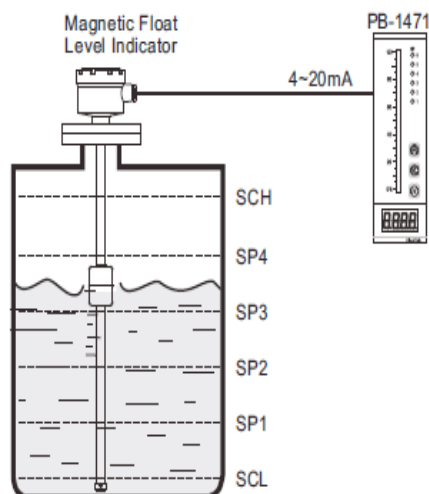

4.2.1 Example 1

Application example:

4mA represents 000.0 when the tank is empty

20mA represents 100.0 when tank is full

Set point 1 is set at 20% of full tank as low level alarm

Set point 2 is set at 40% of full tank as low level alarm


Set point 3 is set at 60% of full tank as high level alarm

Set point 4 is set at 80% of full tank as high level alarm

Linear proportional out signal

Proportional output: Empty tank: 0mA, Full tank: 20mA

Settings are as follows:

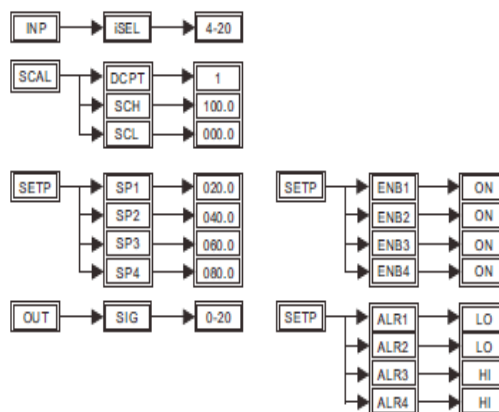

4.2.2 Example 2 (Special input signal range's proportional settings)

To address the problem of special input signal range that falls within 4~20mA, use of the command "SPE" is needed to program a proportionate setting for the input.

Example is Fine Automation capacitance level indicator,

Current Input range is 7mA ~ 11mA, to display 000.0% ~ 100.0%

Formula:

SCHI / SCLI set value =


Expected signal value

SIM signal selection x 100%

Settings are as follow:

Input current 7mA ~ 11mA

$$SCLI = \frac{7}{20} \times 100\% = 35\% \quad SCHI = \frac{11}{20} \times 100\% = 55\%$$

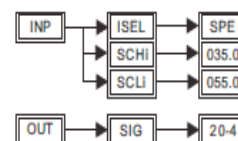

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500

www.acdc.co.za

Product SPECIFICATION SHEET




PM5022R3 - PB-1471

5. Frequently Asked Questions & Troubleshooting


4.2.3 Example 3

Value Settings are as follows:

SCH=100.0 SCL=000.0 SP1=020.0 HON1=005.0 HOF1=010.0
DON=03 DOF=02 ENB1=ON ALR1=HI

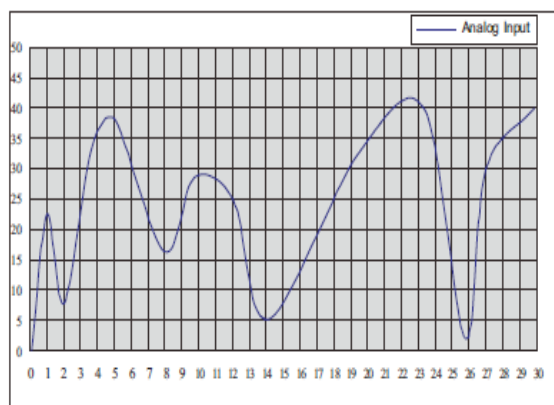

Set point 1's action diagram:

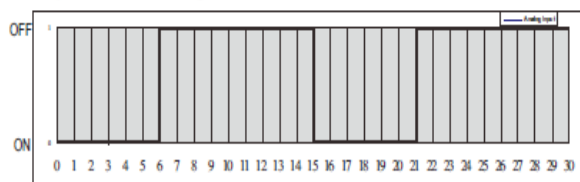

Problem	Rectification method
Panel Face doesn't lights up	1) Check power supply wire is it connected wrongly or not connected. 2) Check whether the power supply is AC85V ~ 265V.
Relay Contact fails to action	1) Check whether LED indication on the panel face is doing action. 2) Check whether wiring on the terminals are connected correctly.
Panel face LED indicators and Relay contacts no action or not working properly.	1) Enter operation menu, check "Enb 1~5" is ON (Default is ON) 2) Enter operation menu, check "don 1~don5", "doF 1~doF5" has any set value. 3) Enter operation menu, check "Hon 1~Hon5", "HoF 1~HoF5" has any set value. 4) Enter operation menu, check "RLt 1~RLt5" has the same value as factory default.
Proportional signal input does not correspond to panel display	Enter operation menu, check "SCH", "SCL", "SEL", "SCH" & "SCL" is configured correctly.
No change in display and bargraph after proportionate input signal	Check input signal connection is connected correctly or is it loose.

BRANCH CONTACT DETAILS

Johannesburg 010 202 3300
Germiston 011 418 9600
Cape Town 021 510 0710
Pinetown 031 700 4215
Riverhorse 031 492 4800

NATIONAL CALL CENTRE

Sales 010 202 3400
Technical 010 202 3500
www.acdc.co.za